



## **Cleaning Instructions AFTER Each Use**

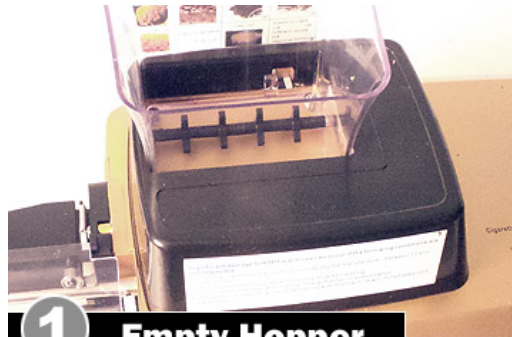

### **1 Empty Hopper**

After production of cigarettes is complete and the machine will not be used for a while, turn off the power and remove the remaining tobacco from the hopper.

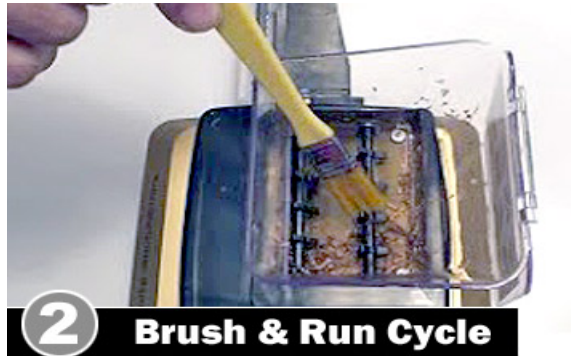

### **2 Brush & Run Cycle**

With the cleaning brush provided, clean the wheels inside the hopper by pushing tobacco inside the tobacco chamber (bottom of the tobacco hopper). Close the tobacco hopper cover. Turn the machine back on and run the machine for one cycle with the Tube Magazine empty to clean the excess tobacco.



### **3 Empty Bottom Drawer**

Then, remove the bottom drawer and put back the excess tobacco in its bag, as the excess tobacco can be and used again later.