



USER MANUAL

 
TOBACCO CHOPPER E1

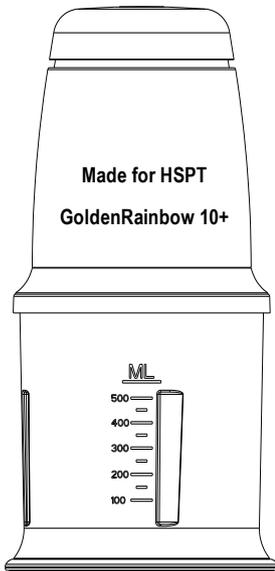

Made for HSPT GoldenRainbow 10+

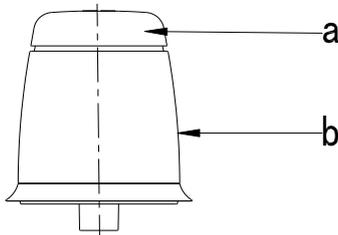


- a. On/off pulse button
- b. Power Head (Motor)

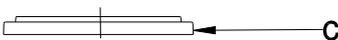


- c. Storage Lid

- d. Blade

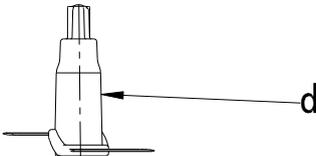

- e. Processing Bowl (clear cup)

- f. Spindle pin

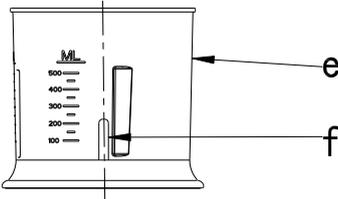

The *Tobacco Chopper E1* was customized exclusively for *HSPT Golden Rainbow 10+*. It is an essential tool, perfect for chopping tobacco when preparing your cigarette tubing. For best results, and security, be sure to carefully read all the instructions contained in the manual before use.

INTRODUCTION:

The *Tobacco Chopper E1* is used to chop commercial tobacco to necessary 1/4' to 5/8" (6mm to 16mm) size.

Please note, **tobacco cut too small will not yield good cigarette compaction.**

CAUTION:

- In order to avoid a hazardous situation due to inadvertent resetting of the thermal cut-off, this appliance must not be connected to a timer switch. To reduce the risk of electric shock do not open this device, Machine parts cannot be changed. Please refer any maintenance or repair to qualified personnel.
- Make sure that the power head is unplugged from the electrical outlet and that the blades have stopped turning before attaching or removing any accessories.
- The 200 watt motor operates on 220-240V, 50/60Hz, electrical power. NEVER allow the power head to become wet when plugged into an electrical outlet.

WARNING

- The power head should never be immersed in water or any other liquid.
- Blades are sharp, handle with care, especially when removing the blade from the bowl, when emptying the bowl and during cleaning. Use extreme caution when handling the blades. Always hold them by the shaft. Do not attempt to sharpen blades.

IMPORTANT: Never run the appliance empty. Never use the chopper with product that is more than 20% moist.

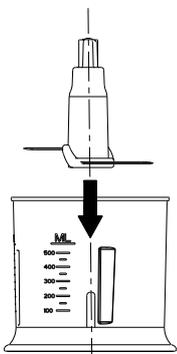


Fig. 1



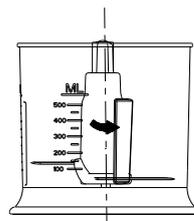


Fig. 2

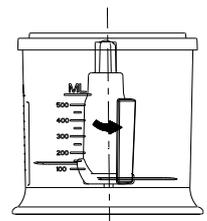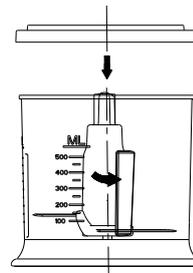

- 1- Holding the chopping blade by the shaft carefully place it over the spindle pin inside the processing bowl. (Fig 1)

IMPORTANT: Always assemble the blades inside the container.

WARNING: do not try to place the blades on to the power head and then into the host container.



- 2- Carefully spin the blade clockwise rotation to make sure that it is inserted properly. (Fig 2) Place the tobacco into the bowl.

IMPORTANT: never add tobacco into the processing bowl before placing the blade assembly in first.

Do not chop more than tobacco quantity needed for your days production. A full 10 cigarettes cycle requires more or less 7gm of tobacco

- 3- Place the storage lid on the bowl.

CAUTION: do not operate without the storage lid in place.

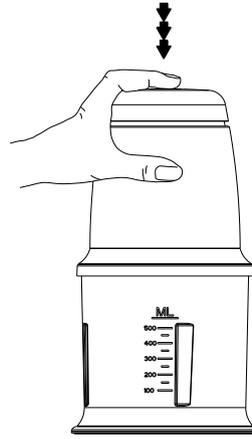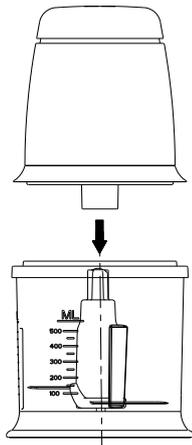

- 4- Place the power head on top of the lid making sure that it is securely in place. To start the appliance, plug the power cord into the electrical outlet, securely hold power head while operating and press on the on/off pulse button located on the top of the power head.
- 5- Hold the processing bowl firmly while pressing the on/off pulse button to ensure the unit stays in place. Operate only few second. To stop the appliance, remove your fingers from the on/off pulse button.
- 6- In order to obtain a better quality of chopping, operate the appliance by using the “pulse” method.
- 7- Make sure that the blades have stopped completely before removing the power head.
- 8- Remove the blade assembly by its shaft before you empty the contents of the processing bowl.

IMPORTANT:

1. If the supply cord is damaged, a professional must replace it.
2. Check if the voltage indicated on the tobacco chopper corresponds to the local main voltage (220~240V) before you connect the appliance
3. Keep the *Tobacco Chopper E1* out of the reach of children.
4. Never immerse the power head unit in water or any other fluid, nor rinse it under the tap. Use only a dry cloth to clean the motor unit.
5. Avoid touching the sharp blades, especially when the appliance is plugged in.
6. Note that if the bowl covers have been correctly mounted, only the blades will function.
7. The appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved
8. Care shall be taken when handling the sharp cutting shades, emptying the bowl and during cleaning.
9. Switching off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

CLEANNING:

Use the *Tobacco Chopper E1* exclusively with commercial tobacco moisten less than 20%.

To clean, use only a soft cloth. Avoid abrasive materials like paper towels, and similar To clean, use only a soft cloth. Avoid abrasive materials like paper towels, and similar items. Never clean with liquid.

WARRANTY:

The Tobacco Chopper E1 is not sold separately. It is provided as complimentary accessory with *the HSPT Golden Rainbow 10+* and not covered by any warranty.

Specification: Tobacco Chopper E1 (DS-1018)

Voltage: AC 220-240V
Frequency: 50/60Hz
Time of operation: 0.5 minutes on, 2minute off
Power: 200W



Do not dispose of this product in the usual household garbage at the end of its life cycle; hand it over at a collection point for the recycling of electrical and electronic appliances. The symbol on the product, the instructions for use or the packing will inform about the methods for disposal.

The materials are recyclable as mentioned in its marking. By recycling, material recycling or other forms of re-utilization of old appliances, you are making an important contribution to protect our environment.

Please inquire at the community administration for the authorized disposal location.

